
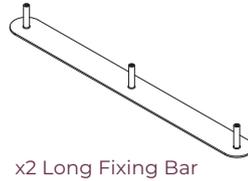


Hideaway Hood

You have received:

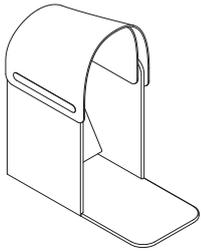


Tools required:

- Flat head screwdriver
- Hex head driver/alan key





Assembly instructions:


1. Tip base on its end. Place sides with back rest fastening holes drawing a line to the right.



Fix sides to base using x6 cross dowels & x6 45mm bolts.

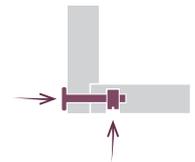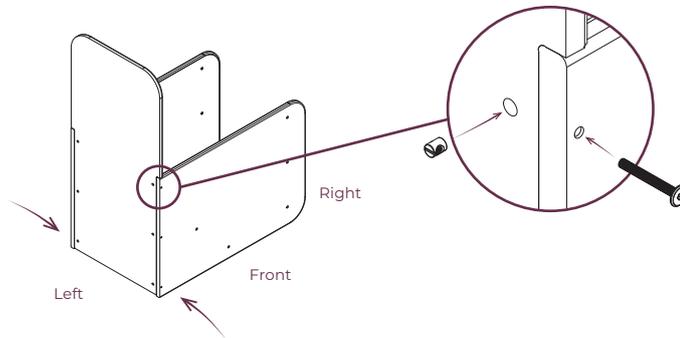


2. Slide upholstered sleeve over the back rest.

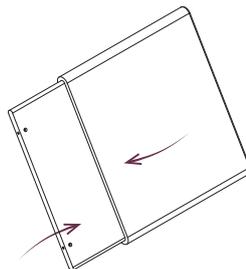


Hideaway Hood

- 3.** Position back in line with the fixing holes on the sides & fasten using x4 cross dowels & x4 45mm Bolts.

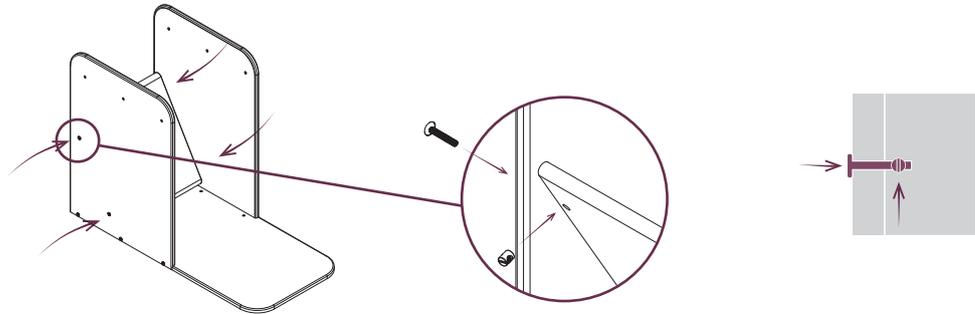

- 4.** Position outer and inner roof either side of the wall with the grooves facing towards the middle.

Slide the fixing bar through the fixing holes & secure using x3 20mm bolts.

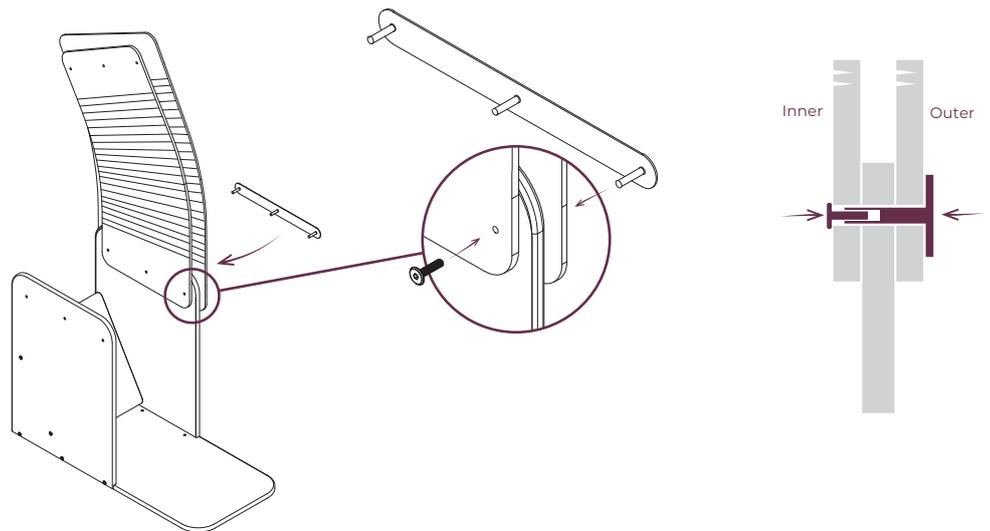

- 5.** Fold the Inner and Outer roof over & position either side of the wall.

Slide the fixing bar through the fastening holes & secure using x3 20mm bolts.

