

Align Front-of-Class Units



Check that you have received **eight** packages.

*2400mm Tote Base Unit will be delivered in seven packages.


Please note: If you have ordered multiple Front of Class Units, all eight packages for the same unit will be identified with the same letter, (e.g. Unit A). Wall fixing hardware not included.

Supplied Parts			Fasteners		
	Front of Class Unit Bases (A and B)	x2		Surefix screws 8*1-1/4	x20
	Front of Class Unit Tops (A and B)	x2		Titus Hilo Screws 32mm	x36
	Front of Class Unit Sides	x2		Hingefast Screw 5*5/8	x40
	Whiteboard Doors	x2		Cover Caps	x36
	Top Aluminium Track	x1	*Quantity may vary depending on the size of your unit.		
	Bottom Aluminium Tracks	x2	You will need:		
4 x "L" Brackets (screwed into bottom track)		x2		Impact Driver	
			<input type="checkbox"/>	#2 SQZ Driver Bit	
			<input type="checkbox"/>	#2 Pozi Driver Bit	
			<input type="checkbox"/>	#1 Square Driver Bit	

Assembly Instructions

Step 1


Position Base Units A and B in their final location. Join them using Titus Hilo screws in the pre-drilled holes. *Skip this step for 2400mm Tote Base Units.

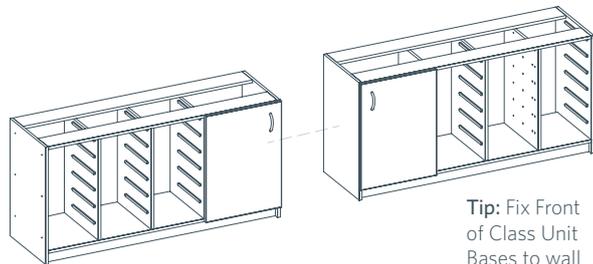

Tip: Fix Front of Class Unit Bases to wall prior to step 2.

Step 2


Place Tops A and B onto the Unit Base, aligning the sides and back. Secure in place by screwing through the top of the Base using Surefix screws and the pre-drilled holes.

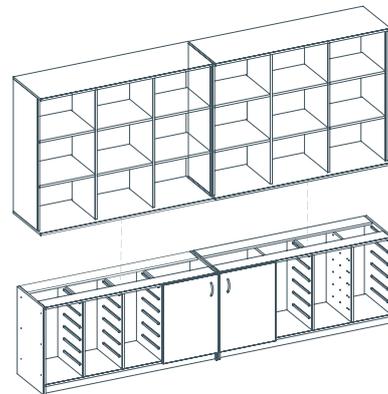

Tip: Fix Front of Class Unit Tops to wall prior to step 3.

Step 3

Using the pre-drilled holes (marked in red), screw the aluminium track into place with Hingefast screws. Slide the whiteboard doors onto the tracks, making sure the lockable door is at the front. Then, attach the "L Brackets" to each end of the bottom aluminium track using the same screws.

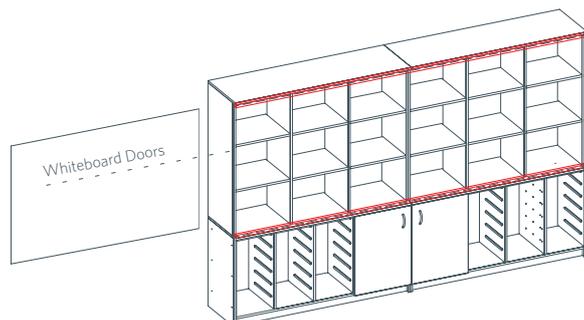

Step 4

With the whiteboard doors in place, attach both Unit Sides using 24 Titus Hilo screws in the pre-drilled holes. Finish by covering the screw heads with the provided cover caps.

