


Quiet Edge Acoustic Screen




Supplied Parts		
	Acoustic Screen	x1
	Vicinity clamps (attached to your screen)	x4
	Allen Key 3mm	x1

Assembly Instructions

Step 1

Lay the screen flat with the grooves facing upwards. Turn the desk over and position the back edge centrally on the screen, aligning it with the clamps on each side.

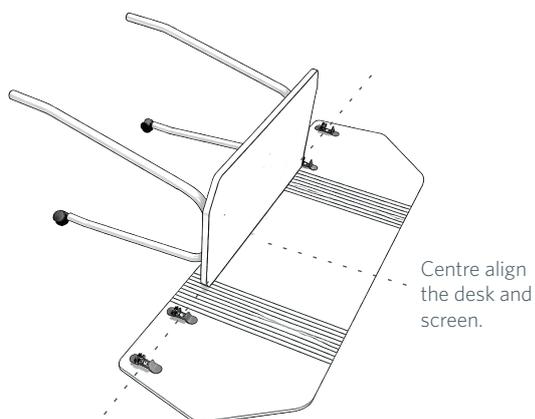


Centre align the desk and screen.

Align the desk edge horizontally with clamps.


Step 2

Fold one side of the screen up so the clamp sits flush against the desktop. Hand tighten the clamp to lock it into position. Repeat on the other side.

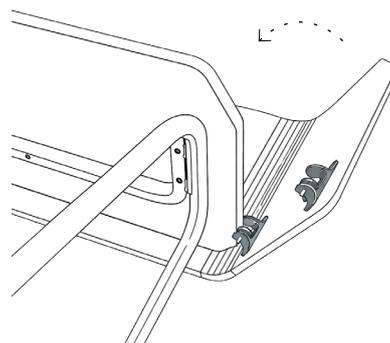

Step 3

Using the supplied allen key, tighten all clamps with moderate force.

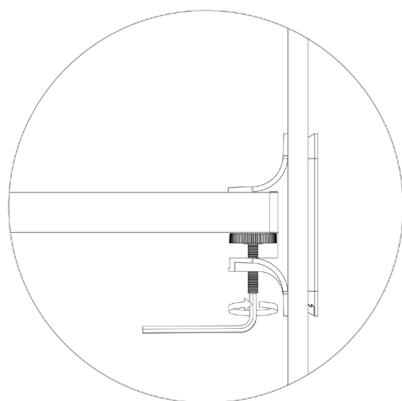

IMPORTANT: Tighten by hand only. Do not use a drill or overtighten.

Step 4

Carefully lift the desk upright.

