# align front of class unit

# Assembly instructions.



# You have received:







1 x Front of Class Unit Top

1 x Front of Class Unit Base

nt of 2 x Front of Jnit Base Class Unit Sides

36 x Screws SQ2

# Step 1

Use two people to lift the Front of Class Wall Unit Base to its final location. We recommend the unit is placed against a wall for safety reasons.

## Step 2

Use two people to lift the Front of Class Wall Unit onto the Base, ensuring the sides and back of the Base and Top are flush.

## Step 3

Fasten the Top to the Base by inserting and tightening the provided screws into the pre-drilled holes in the underside of the Base Unit rails.

## Step 4

Fasten the end panels to the sides of the Base Unit and Top Unit using the pre-drilled holes in the sides of each unit.

## Step 5


We recommend you secure the Front of Class Unit to the wall, refer to the instruction sticker on the reverse of the unit.


# You will need:



SQ2 Screwdriver



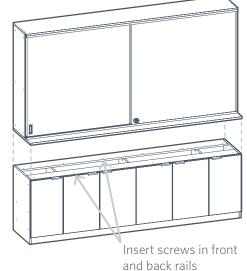

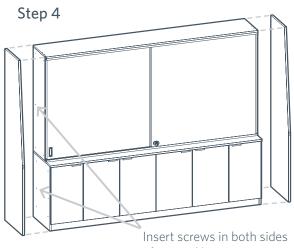

of top and base units