furnware*

Align Front of Class Unit



Check that you have received eight packages.

*2400mm Tote Base Unit will be delivered in seven packages.

Please note: If you have ordered multiple Front of Class Units, all eight packages for the same unit will be identified with the same letter, (e.g. Unit A). Wall fixing hardware not included.


Fasteners					
	Surefix screws 8*1-1/4			x20	
(+) [manaaa	Titus Hilo Screws 32mm			x36	
	Hingefast Screw 5*5/8		x40		
(i) (ii)	Cover Caps			x36	
*Quantity may vary depending on the size of your unit.					
You will need:					
Impact Driver			#2 SQZ Driver Bit		
		÷	#2 Pozi Driver Bit		
			#1 Square Driver Bit		

Supplied Parts					
	Front of Class Unit Bases (A and B)	x2			
	Front of Class Unit Tops (A and B)	x2			
	Front of Class Unit Sides	x2			
	Whiteboard Doors	x2			
	Top Aluminium Track	x1			
	Bottom Aluminium Tracks	x2			
4 x "L" Brackets (screwed into bottom track)					

Assembly Instructions


Step 1

Position Base Units A and B in their final location. Join them using Titus Hilo screws in the pre-drilled holes. *Skip this step for 2400mm Tote Base Units.

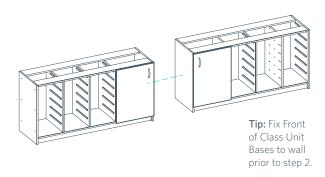


Step 3

Using the pre-drilled holes (marked in red), screw the aluminium track into place with Hingefast screws. Slide the whiteboard doors onto the tracks, making sure the lockable door is at the front. Then, attach the "L Brackets" to each end of the bottom aluminium track using the same screws.

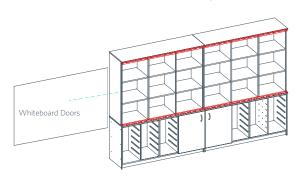

Step 2

Place Tops A and B onto the Unit Base, aligning the sides and back. Secure in place by screwing through the top of the Base using Surefix screws and the pre-drilled holes.

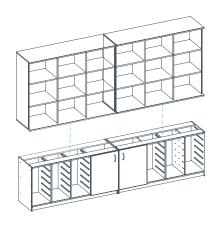

Tip: Fix Front of Class Unit Tops to wall prior to step 3.

Step 4

With the whiteboard doors in place, attach both Unit Sides using 24 Titus Hilo screws in the pre-drilled holes. Finish by covering the screw heads with the provided cover caps.

