


# Mobile Whiteboard

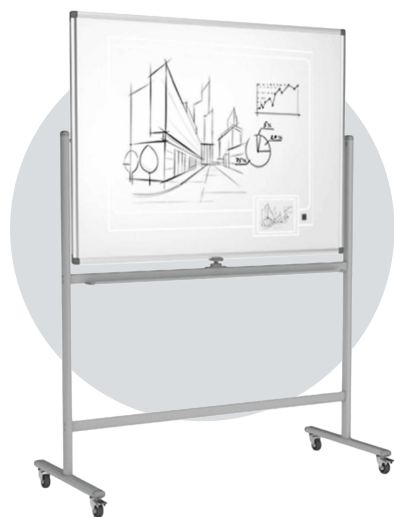


| Supplied Parts                                                                                        |    |
|-------------------------------------------------------------------------------------------------------|----|
| Double Sided WhiteBoard                                                                               | x1 |
| Uprights with 8 x Allen Screws (M6 x 40mm) <b>A</b>                                                   | x2 |
| Base Bar with 4 x Allen Screws (M8 x 25mm) <b>B</b>                                                   | x2 |
| Oval Horizontal Bar <b>C</b>                                                                          | x1 |
| Square Horizontal Bar with 6 x Allen Screws (M4 x 12mm)<br>(7 x Allen Screws for 1.8m board) <b>D</b> | x1 |
| ABS WhiteBoard Positioner                                                                             | x1 |
| Castor Wheels (2 are lockable)                                                                        | x4 |
| Plastic Top-Caps                                                                                      | x6 |
| Spanner                                                                                               | x1 |
| Allen Key (M4 and M6 Screws)                                                                          | x1 |
| Pen shelf                                                                                             | x1 |

## Assembly Instructions


### Step 1

Assemble the Upright and base bar to create two T-Frames using the 4 M8 x 25mm screws.

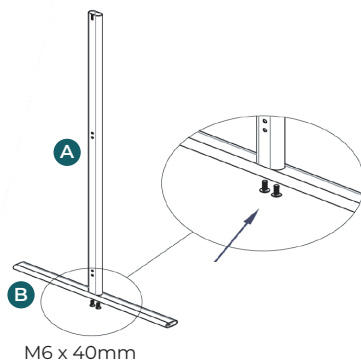


### Step 2

Attach the oval horizontal and square horizontal bar to the T-Frame using the 8 M6 x 40mm screws.

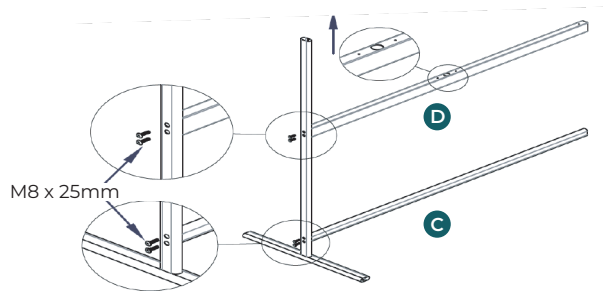


### Step 3

Assemble the penshelf and positioner onto the square horizontal bar using the M4 x 12mm screws.

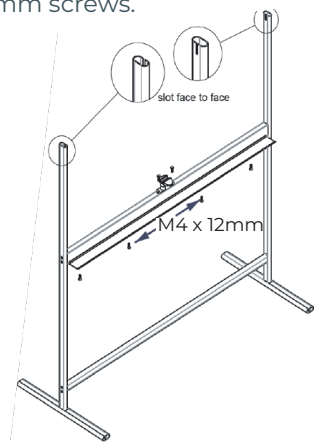


### Step 4

Attach the castors to each base bar

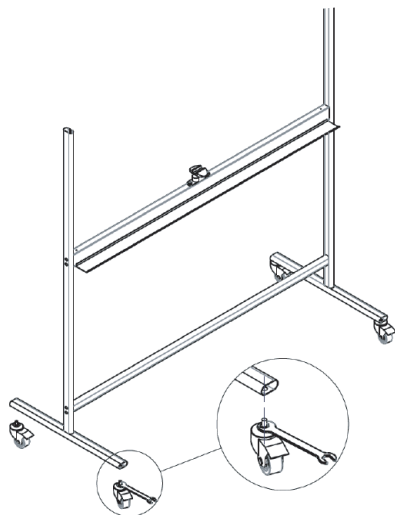


### Step 5

Fit the WhiteBoard to the frame by sliding the pins on the side of the WhiteBoard into the top of the T-Frame.

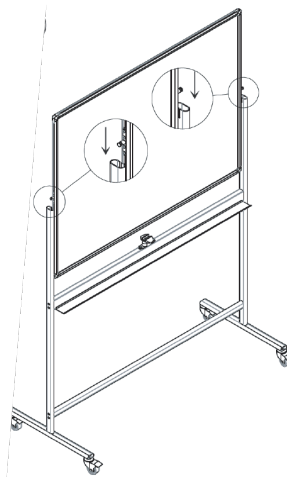

### Step 6

Fit 6 of the plastic caps onto the ends of the pipes.

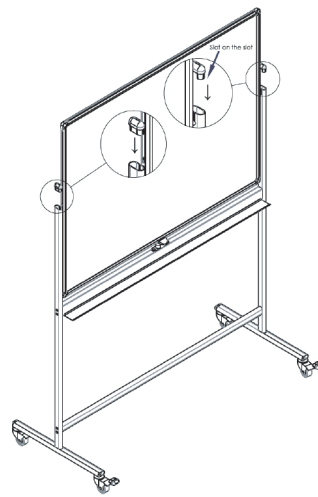

**Note:** To prevent damage, keep the Allen Key to maintain the ongoing hex-bolts tightness and rigidity of the mobile frame.